



Before installation!
 Be sure to correctly size
 your Easy Start.
 Go to microair.net and use
 the Easy Start selector page.

1. Before Easy Start installation! All connectors used must be 600VAC rated!

If present in your system all start component connections and wires need to be removed where you see a yellow X

2. Put Easy Start Black with compressor common on the terminal under the screwhead using a fork or ring terminal connector.

3. Put Easy Start Orange on the run-capacitor Herm (H) position.

4. Remove compressor run from the run-capacitor and Splice to Easy Start Brown. See the red X.

NOTE: The wire between the terminal and the run-capacitor common remains untouched!

5. Where you removed the last connection Put Easy Start White on the run-capacitor.